


Guilekeys GK-21 User Manual

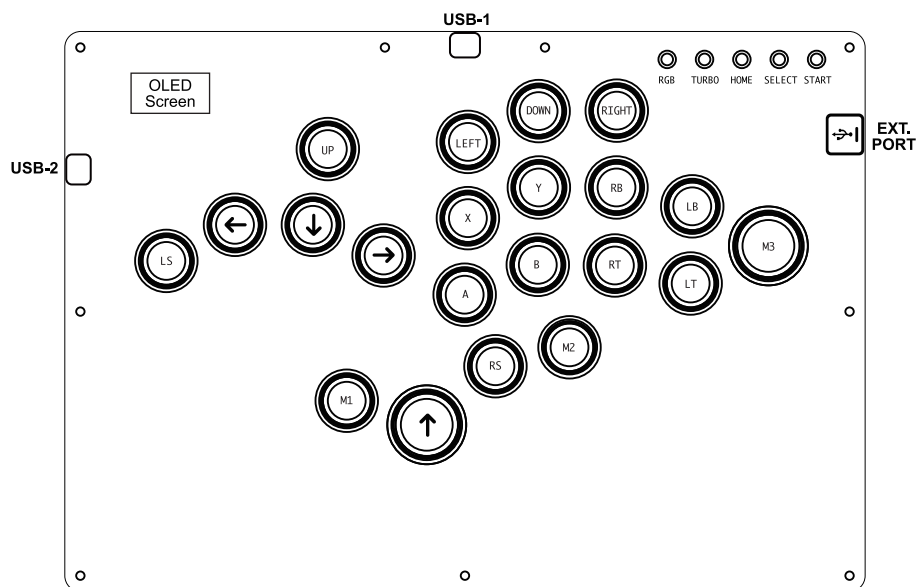


Button mapping reference

RP2040	XINPUT	SWITCH	PS4/PS5	DINPUT	ARCADE	KEYBOARD
PIN19	A	B	×	2	K1	LEFT SHIFT
PIN24	B	A	○	3	K2	Z
PIN18	X	X	□	1	P1	LEFT CONTROL
PIN25	Y	Y	△	4	P2	LEFT ALT
PIN29	LB	L	L1	5	P4	C
PIN27	RB	R	R1	6	P3	SPACEBAR
PIN28	LT	ZL	L2	7	K4	V
PIN26	RT	ZR	R2	8	K3	X
PIN05	BACK	MINUS	SELECT	9	COIN	5
PIN06	START	PLUS	START	10	START	1
PIN02	LS	LS	L3	11	LS	EQUAL
PIN01	RS	RS	R3	12	RS	MINUS
PIN04	GUIDE	HOME	PS	13	PS	9
PIN03	M1					
PIN08	M2					
PIN07	M3					
PIN00	TURBO					

Functions

Input Modes

To change input modes, please press and hold down one of the following buttons before power on the gamepad.

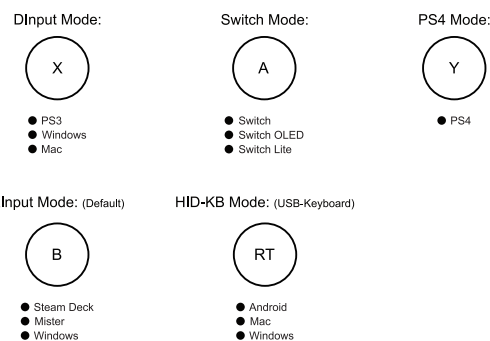

PS4/PS5 MODE

This product will be disconnected at 8 minutes after connecting to the PS4/PS5 console. You can avoid this 8 minutes timeout by uploading the verification files which required for PS4 mode. For detailed steps, please visit our official website www.guilekeys.com.

Up Priority Mode: (HOME + START+ UP)

- Button Pressed = Result
- Left + Right = Neutral
- Right + Left = Neutral
- Up + Down = Up
- Down + Up = Up

Neutral Mode: (HOME + START+ DOWN)

- Button Pressed = Result
- Left + Right = Neutral
- Left + Right = Neutral
- Up + Down = Neutral
- Down + Up = Neutral

Last Input Priority Mode: (HOME + START+ LEFT)

- Button Pressed = Result
- Left + Right = Right
- Right + Left = Left
- Left = Down
- Down + Up = Up

D-Pad Modes Settings

To change D-pad modes, Please hold down SELECT + START and press one of the following buttons.

- D-Pad Digital(Default): SELECT+START+ DOWN
- Left Analog Stick: SELECT+START+ LEFT
- Right Analog Stick: SELECT+START+ RIGHT

RGB LEDs Settings

To change RGB LED Animations, please hold down Start + Select and press one of the following buttons.

- SELECT + START + X Next Animation
- SELECT + START + A Previous Animation
- SELECT + START + Y Brightness Up
- SELECT + START + B - Brightness Down
- SELECT + START + RB LED Parameter Up
- SELECT + START + RT - LED Parameter Down
- SELECT + START + LB Pressed Parameter Up
- SELECT + START + LT Pressed Parameter Down

Web Configuration

The gamepad is built-in a local web server to set up the configurations, please follow these steps to access the webpages.

- Press and hold START before plug the gamepad into a computer with usb type-c cable.
- Open a browser and navigate to <http://192.168.7.1>. Then, you can proceed with the gamepad settings


Turbo Modes

To enable Turbo mode, please hold down the TURBO button and press the corresponding button, including X/Y/RB/LB and A/B/RT/LT. The speed can be adjusted from 1 to 60 times per second.

Note: Any changes made to the gamepad's settings will not be saved once it loses power. The turbo mode's default speed is 15 times per second.

- Increase Speed (TURBO + UP)
- Lower the Speed (TURBO + DOWN)

Guilekeys GK-21 ユーザーマニュアル

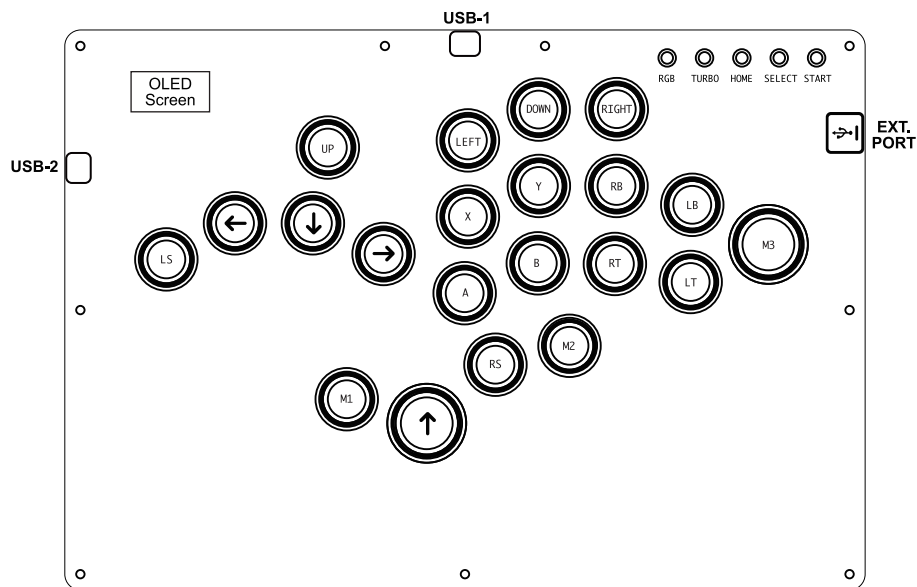

ボタンマッピングリファレンス

RP2040	XINPUT	SWITCH	PS4/PS5	DINPUT	ARCADE	KEYBOARD
PIN19	A	B	×	2	K1	LEFT SHIFT
PIN24	B	A	○	3	K2	Z
PIN18	X	X	□	1	P1	LEFT CONTROL
PIN25	Y	Y	△	4	P2	LEFT ALT
PIN29	LB	L	L1	5	P4	C
PIN27	RB	R	R1	6	P3	SPACEBAR
PIN28	LT	ZL	L2	7	K4	V
PIN26	RT	ZR	R2	8	K3	X
PIN05	BACK	MINUS	SELECT	9	COIN	5
PIN06	START	PLUS	START	10	START	1
PIN02	LS	LS	L3	11	LS	EQUAL
PIN01	RS	RS	R3	12	RS	MINUS
PIN04	GUIDE	HOME	PS	13	PS	9
PIN03	M1					
PIN08	M2					
PIN07	M3					
PIN00	TURBO					

機能

入力モード

入力モードを変更するには、ゲームパッドの電源を入れる前に、次のいずれかのボタンを押し続けます。

入力モード:



- PS3
- Windows
- Mac

スイッチモード:



- Switch
- Switch OLED
- Switch Lite

PS4モード:



- PS4

XInput モード: (デフォルト)



- Steam Deck
- Miiser
- Windows

HID-KB モード: (USB キーボード)



- Android
- Mac
- Windows

PS4/PS5モード

この製品は、PS4/PS5 コンソールに接続してから 8 分後に切断されます。PS4 モードに必要な検証ファイルをアップロードすることで、この 8 分間のタイムアウトを回避できます。詳細な手順については、公式 Web サイト www.guilekeys.com をご覧ください。

アップ優先モード: (HOME + START+ UP)

- Button Pressed = Result
- Left + Right = Neutral
- Right + Left = Neutral
- Up + Down = Up
- Down + Up = Up

ニュートラルモード: (HOME + START+ DOWN)

- Button Pressed = Result
- Left + Right = Neutral
- Left + Right = Neutral
- Up + Down = Neutral
- Down + Up = Neutral

最終入力優先モード: (HOME + START+ LEFT)

- Button Pressed = Result
- Left + Right = Right
- Right + Left = Left
- Left = Down
- Down + Up = Up

DPadモード設定

D/パッドモードを変更するには、SELECT + STARTを押しながら、次のいずれかのボタンを押し続けます。

- D-Pad デジタル(デフォルト):SELECT+START+ DOWN
- 左アナログスティック:SELECT+START+ LEFT
- 右アナログスティック:SELECT+START+ RIGHT

RGB LED設定

RGB LED アニメーションを変更するには、Start + Select キーを押しながら、次のいずれかのボタンを押し続けます。

- SELECT + START + X 次のアニメーション
- SELECT + START + A 前のアニメーション
- SELECT + START + Y 明るさアップ
- SELECT + START + B - 明るさダウン
- SELECT + START + RB LED パラメータアップ
- SELECT + START + RT - LED パラメータダウン
- SELECT + START + LB パラメータアップを押す
- SELECT + START + LT パラメータダウンを押しました

ウェブ構成

ゲームパッドには、設定を行うためのローカル Web サーバーが組み込まれています。Web ページにアクセスするには、次の手順に従ってください。

- USB タイプ C ケーブルを使用してゲームパッドをコンピュータに接続する前に、START を押し続けます。
- ブラウザを開き、<http://192.168.7.1> にアクセスします。その後、ゲームパッドの設定に進みます。

ターボモード

ターボモードを有効にするには、TURBOボタンを押しながら、X/Y/RB/LB、A/B/RT/LTなどの対応するボタンを押し続けます。速度は1秒あたり1~60回まで調整できます。

注意: ゲームパッドの設定に加えた変更は、電源が切れると保存されません。ターボモードのデフォルトの速度は 1 秒あたり 15 回です。

- 速度を上げる (TURBO + UP)
- 速度を落とす (TURBO + DOWN)